

ROKU ULTRA + HOTSPOT QUICK START GUIDE

IMPORTANT INFORMATION

Fountaindale Public Library hopes you enjoy the streaming services provided on the Roku Ultra device. To ensure your viewing of these services is not interrupted, please:

- Do not connect the Roku to your personal Wi-Fi.
- Do not log out of Crunchroll*, Disney+, HBO Max, Hulu or Netflix.
- Do not remove any set channels or content.
- Do not enter or leave personal credit card information logged into any channels or accounts.

For any content-related concerns, please visit **fountaindale.org/policies** to review our Collection Management Policy or request a copy upon your return of the Roku Ultra device.

Thank you, and enjoy your experience.

*Crunchyroll is only available on Outreach Roku devices.

WHAT'S INCLUDED



Hotspot



Hotspot Charger



Roku Ultra







Roku Remote




HDMI Cable

SETUP


Step 1: Power on Hotspot

Press and hold the button near the top, right corner until the "Welcome" message appears.

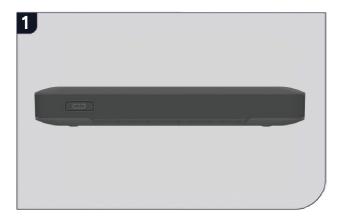


Step 2: Connect to TV

Connect the Roku Ultra to an HDMI port on your TV using the HDMI cable provided.

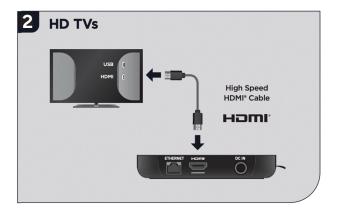

Step 3: Connect to Power


Use the included power adapter to connect your Roku Ultra to a power outlet.

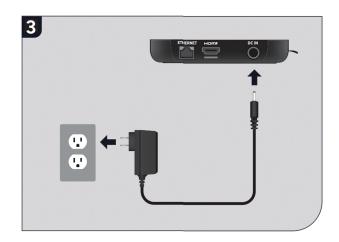

Step 4: Power on TV and Select Input

Use your TV remote to power on the TV and select the HDMI input you used to connect the Roku Ultra.

The Roku will automatically connect to the hotspot once both are powered on.

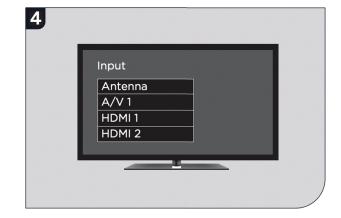

AVAILABLE APPS



Only available on Outreach Roku devices.

ISNEW





Library card and PIN are needed to sign in.





Library card and PIN are needed to sign in.







Only available on Outreach Roku devices.




Select My VUDU and then Movies to find a collection of ad-free movies.



SELECTING THE CORRECT PROFILE

To watch Disney+, HBO Max, Hulu or Netflix, you will need to select the profile that matches the label found on the front or bottom of the Roku Ultra device.

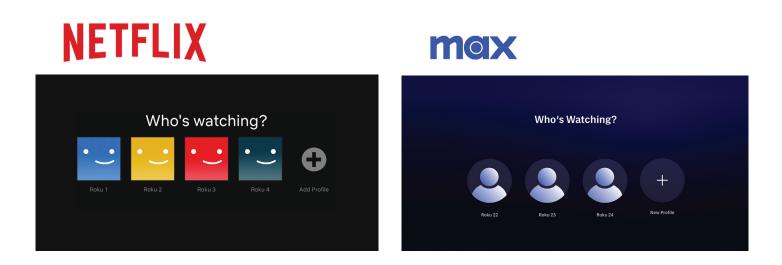





hulu

LINKING YOUR ACCOUNT

Hoopla

You will need an active hoopla account and access to a web browser to link to the hoopla app. If you have an account, press Next, otherwise visit **hoopladigital.com** to create an account first.

Log into your hoopla account from a web browser. Once logged in, visit **hoopladigital.com/link** and enter the unique code displayed on your screen. This can also be done through the settings menu on the hoopla app.

You have 20 checkouts per month available to use on your hoopla account. Be sure to log out of your account before returning the Roku. If you forget, we will log out of any linked accounts once the Roku is returned.



Link your hoopla account

Please go to hoopladigital.com/link and enter the code below to link this TV with your hoopla account.



Verifying link...

LINKING YOUR ACCOUNT

Kanopy

You will need an active Kanopy account and access to a web browser to link to the Kanopy app. If you have an account, proceed to the next step, otherwise, visit **kanopy.com** to create an account first.

From the home screen, select Settings from the sidebar menu. Next, select Login at the top. Log into your Kanopy account from a web browswer. Once logged in, visit **kanopy.com/link** and enter the unique code displayed on your screen. This can also be done through the settings menu on the Kanopy app.

You have 30 tickets per month available to use on your Kanopy account. Be sure to log out of your account before returning the Roku. If you forget, we will log out of any linked accounts once the Roku is returned.

kanopy

Link Your Device

kanopy



To link your Roku device to your Kanopy account:

- 1. Go to kanopy.com/link
- 2. Enter the code

To access Kanopy on Roku, in addition to being a member of a participating university or public library, you need to have a Kanopy account. If you don't already have one, please go to kanopy.com/user/register before linking.

ADDITIONAL SUPPORT

For additional information on how to set up and use the Roku device, please visit **support.roku.com**.



